




EN

Operation & Maintenance Manual

Three-Point Tine Rake

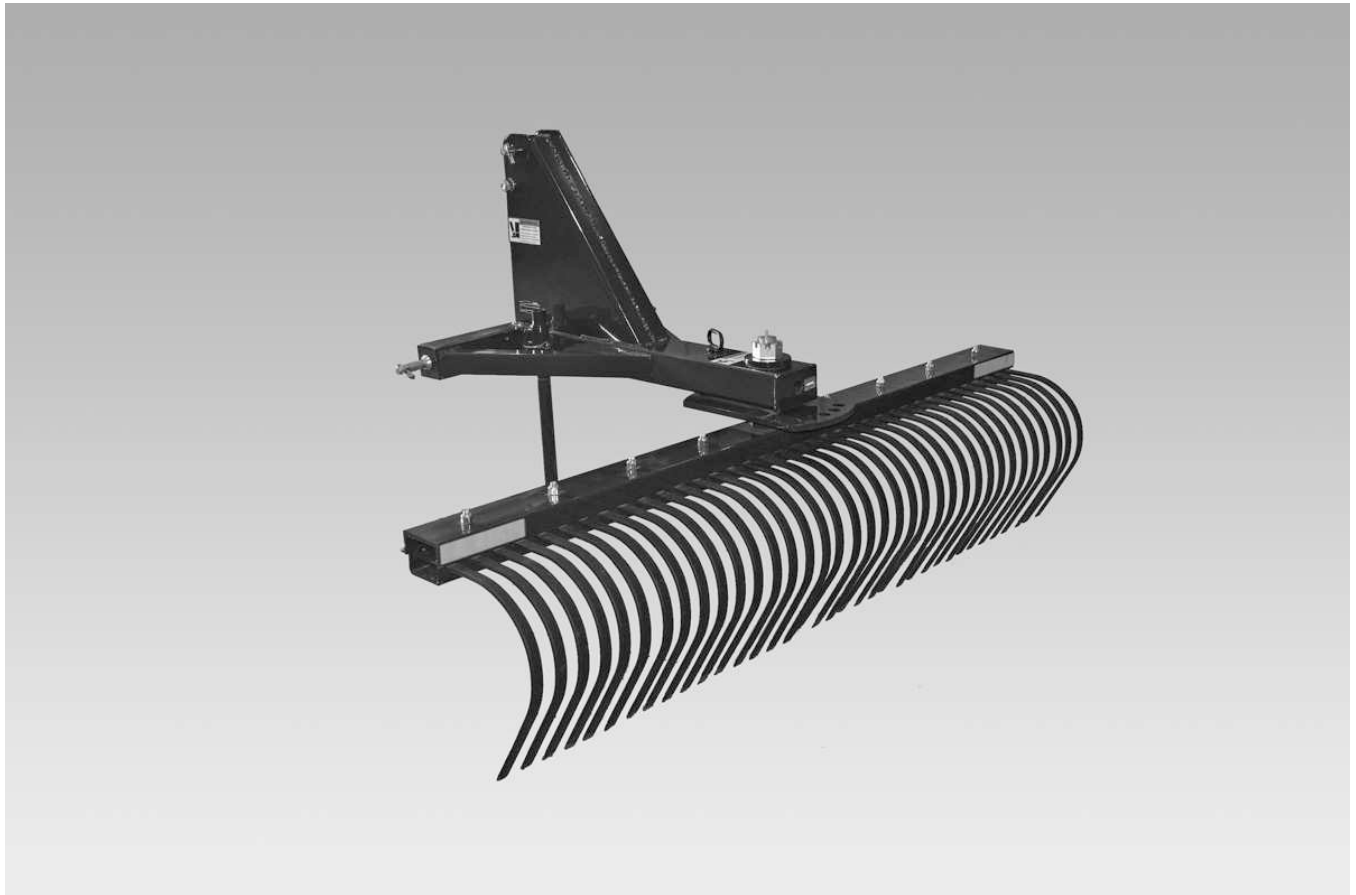

Three-Point Tine Rake 60 S/N: B64800101 & Above
Three-Point Tine Rake 72 S/N: B64900101 & Above
Three-Point Tine Rake 84 S/N: B64A00101 & Above






FOREWORD	3
SERIAL NUMBER LOCATION	3
IMPLEMENT IDENTIFICATION	3
Front Of Implement	3
Rear Of Implement	3
FEATURES AND ACCESSORIES	4
Standard Items	4
SAFETY AND TRAINING RESOURCES	5
SAFETY INSTRUCTIONS	5
Safe Operation Is The Operator's Responsibility (Implement)	5
Safe Operation Needs A Qualified Operator	5
Use Safety Rules	5
Call Before You Dig	5
Silica Dust Exposure	6
FIRE PREVENTION	6
Maintenance	6
Operation	6
Electrical	6
Hydraulic System	6
Fueling	7
Starting	7
Spark Arrester Exhaust System	7
Welding And Grinding	7
Fire Extinguishers	7
PUBLICATIONS AND TRAINING RESOURCES	8
IMPLEMENT SIGNS (DECALS)	8
OPERATING INSTRUCTIONS	10
DAILY INSPECTION	10
Implement Mounting Frame	10
Three-Point Hitch	10
OPERATING PROCEDURE WITH COMPACT TRACTORS	11
Approved Compact Tractor Models & Requirements	11
Compact Tractor / Implement Setup	11
Entering And Exiting The Compact Tractor	11
Installing The Three-Point Implement	11
Control Functions Three-Point Hitch (Implement)	14
Driving The Implement And Tractor To Worksite	14
Angled Positioning	15
Backfilling Positioning	16
Operating The Three-Point Implement	16
Removing The Three-Point Implement	16
LIFTING THE IMPLEMENT	19
TRANSPORTING THE IMPLEMENT ON A TRAILER	19
Fastening The Implement To A Trailer	19
TRANSPORTING THE IMPLEMENT AND MACHINE ON A TRAILER	20
PREVENTIVE MAINTENANCE	22
MAINTENANCE SAFETY WARNINGS	22
TROUBLESHOOTING CHART	23

MAINTENANCE INTERVALS	24
LUBRICATION LOCATIONS	24
REMOVING AND INSTALLING PIVOT MOUNT	25
REMOVING AND INSTALLING RAKE TINES	27
STORAGE AND RETURN TO SERVICE	28
Implement Storage	28
Return To Service	28
SPECIFICATIONS	29
TINE RAKE DIMENSIONS	29
PERFORMANCE SPECIFICATIONS	31
TORQUE SPECIFICATION FOR BOLTS	32
Torque For General SAE Bolts	32
Torque For General Metric Bolts	33
WARRANTY	35
IMPLEMENT WARRANTY	35

SERIAL NUMBER LOCATION

Figure 1

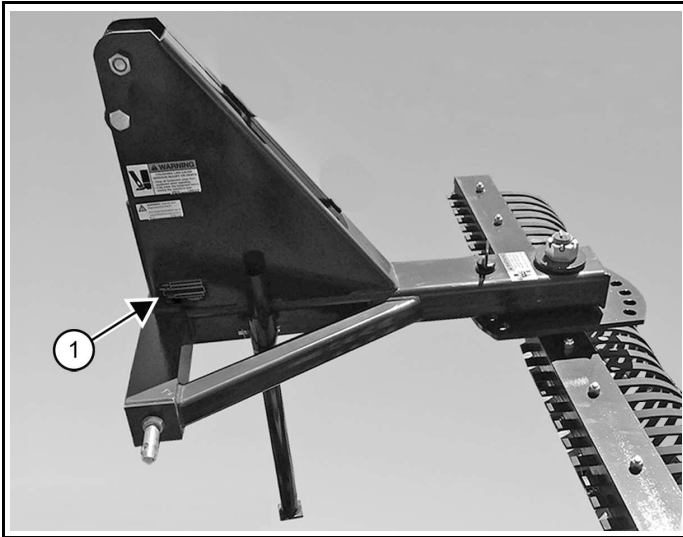


P142017b

Always use the serial number (Item 1) [Figure 1] of the three-point tine rake when requesting service information or when ordering parts. Earlier or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

IMPLEMENT IDENTIFICATION

Front Of Implement

Figure 2

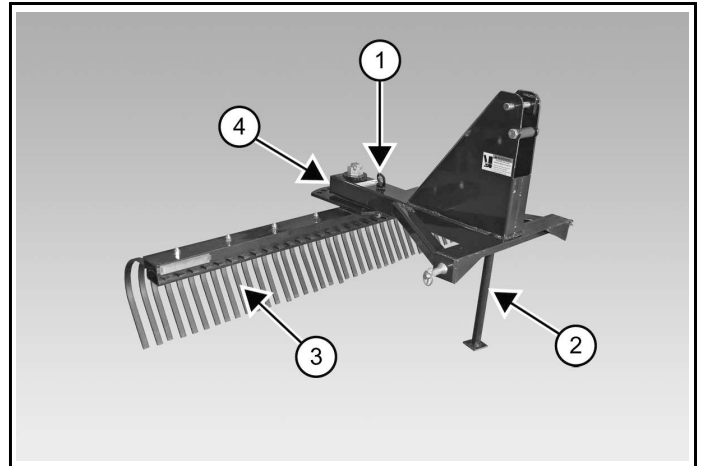


P-96311a

REF.	DESCRIPTION
1	Locking Pin
2	Storage Stand
3	Rake Tine
4	Pivot Assembly

Rear Of Implement

Figure 3

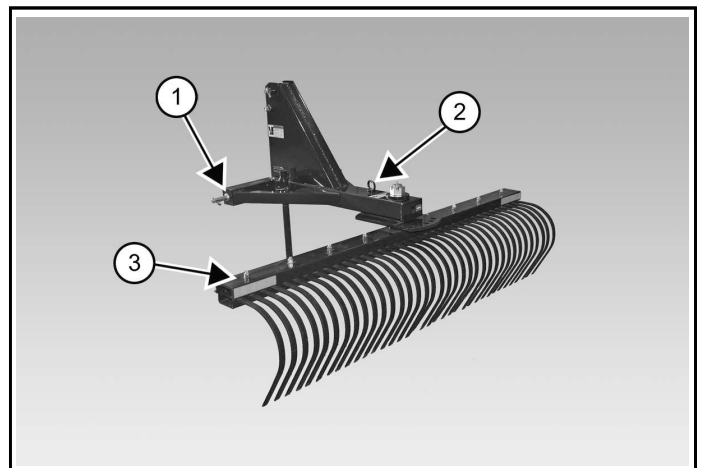

P-96312a

REF.	DESCRIPTION
1	Three-Point Hitch (Category 1)
2	Mainframe
3	Tine Rake Frame

FEATURES AND ACCESSORIES

Standard Items

The three-point tine rake is equipped with the following standard items

- Five Forward Angles.
- Five Rear Angles.
- Rear Three-Point Quick Hitch Compatible.
- Equipped With Storage Stand.

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility (Implement)



DANGER

The signal word **DANGER** on machine signs and in the manuals indicates a hazardous situation which, if not avoided, will result in serious injury or death. ◀

D-1002

WARNING

The signal word **WARNING** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death. ◀

W-2044

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine. ◀

I-2019

The machine and implement must be in good operating condition before use.

Check all of the items on the Service Schedule decal (if equipped) in the Every 10 Hours section or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

Use Safety Rules

- Read and follow instructions in the machine and the implement's Operation & Maintenance Manual before operating.
- Check for underground lines before operating implement (if applicable).
- In addition to the design and configuration of equipment, hazard control, and accident prevention are dependent upon the awareness, concern, prudence, and proper training of personnel involved

in the operation, transport, maintenance, and storage of equipment.

- Check that the implement is securely fastened to the machine.
- Make sure all the machine controls are in the neutral position before starting the machine.
- Operate the implement only from the operator's position.
- Operate the implement according to the Operation & Maintenance Manual.
- When learning to operate the implement, do it at a slow rate in an area clear of bystanders.
- DO NOT permit personnel to be in the work area when operating the machine and implement.
- The implement must be used ONLY on approved machines. Visit igniteattachments.com for an updated list of approved implements for each machine model.
- DO NOT modify equipment or add implements that are not approved by the manufacturer.
- DO NOT make any adjustments or repairs on the machine or implement while the engine is running.
- Keep shields and guards in place. Replace if damaged.

Call Before You Dig




P200081

Dial 811 (USA Only)

Dial 1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province / city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

Silica Dust Exposure

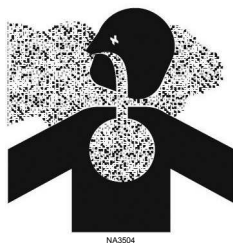

Silica dust can cause lung disease and is known to the state of California to cause cancer.

Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust.

Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray, or other means to control dust.

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants, and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks, or hot components can contact flammable material, explosive dust, or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for

leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher sulfur content. Avoid death or serious injury from fire or explosion. Consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

Starting

Do not use ether or starting fluids on any engine that has glow plugs or an air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrester muffler (if equipped).

Welding And Grinding

Always clean the machine and implement, disconnect the battery, and disconnect the wiring from the Ignite Attachments controllers before welding. Cover rubber hoses, battery, and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders, or covers can be flammable or explosive. Repair such components in a well-ventilated area away from open flames or sparks.


Fire Extinguishers



Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

PUBLICATIONS AND TRAINING RESOURCES

The following publications are also available for your Ignite Attachments implement. Access them online at igniteattachments.com.

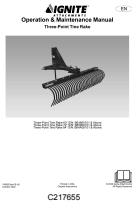


Operation & Maintenance Manual

Complete instructions on the correct operation and the routine maintenance of your implement. 7495823.

For the latest information on Ignite Attachments products and the Ignite Attachments Company, visit our website at igniteattachments.com.

IMPLEMENT SIGNS (DECALS)


Figure 4

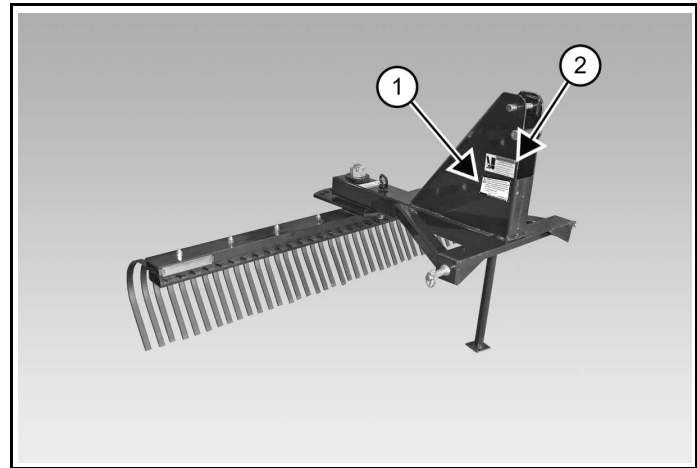




P-863115

REF.	DECAL
1	<p>Crush Warning</p> <p>Located near 3 point hitch, both sides</p> <p>71892000IG</p>  <p>WARNING</p> <p>CRUSHING CAN CAUSE SERIOUS INJURY OR DEATH</p> <ul style="list-style-type: none"> • Keep all bystanders away from equipment when operating. • Fully lower the implement before leaving the operator's seat. <p>76998 SW 71892000IG enUS</p>
2	<p>Prop 65</p> <p>Located near 3 point hitch</p> <p>73536420IG</p>  <p>WARNING: This product can expose you to chemicals including lead and lead compounds, mineral oils, and phthalates which are known to the State of California to cause cancer and birth defects or other reproductive harm.</p> <p>For more information go to www.P65Warnings.ca.gov.</p> <p>SW 21 73536420IG enUS</p>

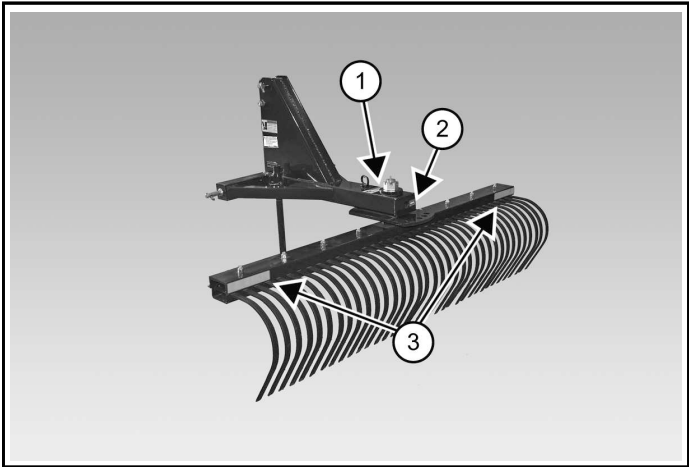Figure 5




P-96312c

REF.	DECAL
1	<div>Pinch Warning</div> <div>Located On Pivot Assmebly</div> <div>71838450IG</div> <div></div>
2	<div>Lubrication Location</div> <div>Located On Front Of Pivot Assembly</div> <div>67053400IG</div> <div></div>
3	<div>Reflector</div> <div>Located on frame, both sides</div> <div>71409200IG</div> <div></div>

DAILY INSPECTION

Implement Mounting Frame

Figure 6

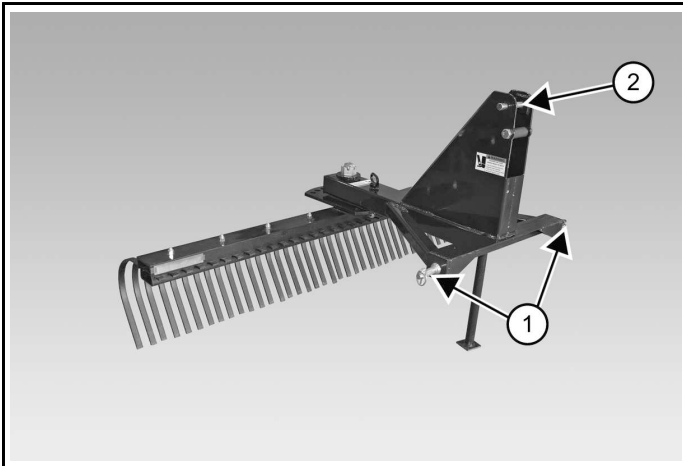

- Inspect the lower implement mounts (Item 1) and upper mount (Item 2) [Figure 6] and all welds on the implement for wear and damage each time the implement is removed from the machine.
- Check the following items at the start of a work day:
 - Check for damaged or missing decals. Replace if necessary.
 - Replace any worn or damaged parts immediately.
- Frequently inspect the implement to ensure that all components are secure and that all bolts and nuts are thoroughly tightened.

Three-Point Hitch

See your machine Operation & Maintenance Manual for detailed information on inspecting three-point hitch.


WARNING

UNINTENDED MOVEMENT HAZARD

Failure to follow instructions can cause serious injury or death.

The parking brake must be engaged before leaving the operator's seat. Rollaway can occur because the transmission may not prevent machine movement. Lock the brake pedals together (if equipped) before activating the parking brake. ◀

Figure 7

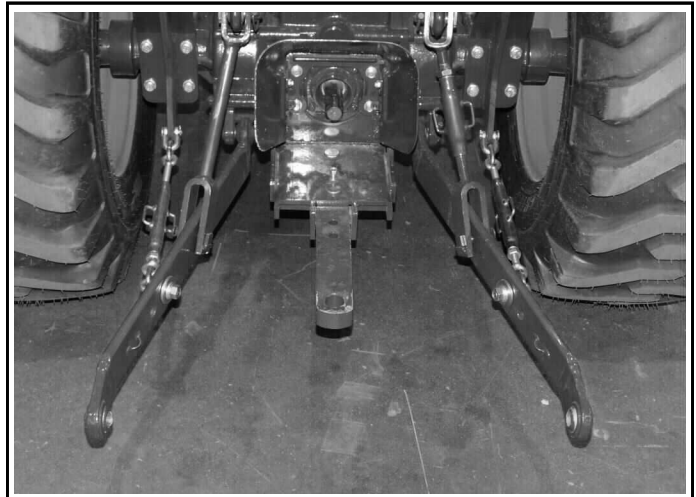

P138256

- Inspect the three-point hitch linkage, PTO shaft splines, guards, and shields. Replace if damaged or missing [Figure 7]. Repair broken or loose parts.

OPERATING PROCEDURE WITH COMPACT TRACTORS

Approved Compact Tractor Models & Requirements

	Rake 60"	Rake 72"	Rake 84"
Tractor HP	18–60 HP	18–60 HP	26–60 HP

The chart shows the approved box blade models for compact tractors based on horsepower.

Warranty on this implement is void if used on a nonapproved carrier. Contact your Ignite Attachments representative for a current list of compatible carriers.

Compact Tractor / Implement Setup

Setting Up The Ballast

Install the correct ballast on the compact tractor before installing the implement. See the compact tractor Operation & Maintenance Manual for ballast information.

Entering And Exiting The Compact Tractor

⚠ WARNING

INSTABILITY HAZARD

Failure to obey warnings can cause the machine to rollover.

- Use Roll-Over Protective Structure (ROPS) and fasten the seat belt.
- Install the correct rear ballast.
- Do NOT exceed the Loader lift capacity.
- Check tire condition and proper air pressure.
- Use tires with the correct load rating. ◀

W-3043

See your compact tractor Operation & Maintenance Manual for detailed instructions on entering and exiting the machine.

Installing The Three-Point Implement

NOTE: Your machine and attachment and / or implement models may vary, but the procedure is the same. Always inspect the compact tractor three-point hitch and implement three-point mounting before installation. (See Daily Inspection on Page 10) .

⚠ WARNING

GENERAL HAZARD


Failure to obey warnings can cause serious injury or death.

Obey all warnings on the machine and in the manuals. ◀

W-2144

NOTE: The following images may not show your exact three-point implement but the procedure is the same.

Figure 8

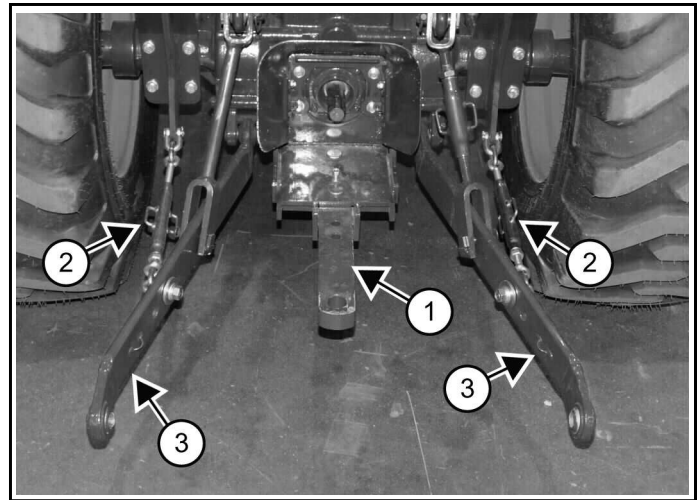

c138256a

1. Move the drawbar (Item 1) [Figure 8] to the storage position or remove (if necessary). See the compact tractor Operation & Maintenance Manual for detailed information.

The three-point hitch lower links must be set wide enough to clear the implement mounting pins.

2. Adjust the sway bars (Item 2) (both sides) to move the lower links (Item 3) [Figure 8] as needed.

See the compact tractor Operation & Maintenance Manual for detailed information on adjusting sway bars.

⚠ WARNING

CRUSHING HAZARD


Contact with the machine can cause serious injury or death.

Before backing the machine, look in all directions and make sure no bystanders are in the work area. Do not allow anyone between the machine and the implement when backing up to the implement for installation. ◀

W-2734

3. Enter the compact tractor (See Entering And Exiting The Compact Tractor on Page 11) .
4. Start the engine and release the parking brake.

Figure 9

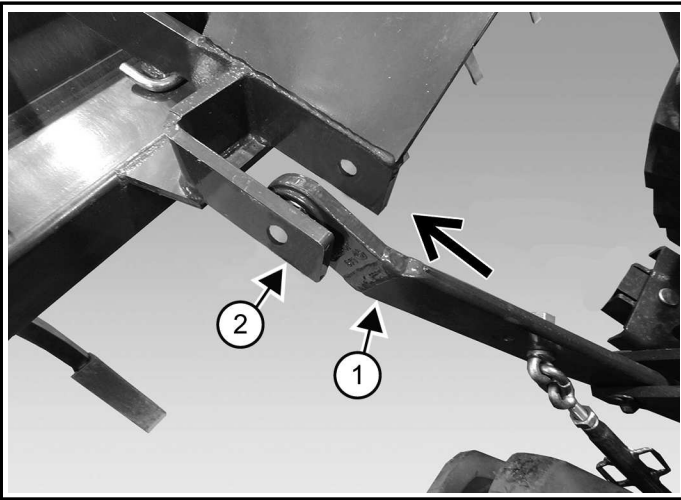

5. Drive the compact tractor to the implement and align the lower links (Item 1) with the implement lower mounts (Item 2) [Figure 9] (both sides).
6. Lower or raise the compact tractor three-point hitch lower links (Item 1) until they are even with the lower mounts (Item 2) [Figure 9] (both sides) of the three-point implement.

See the compact tractor Operation & Maintenance Manual for detailed information on operating the compact tractor.

7. Stop the engine and exit the compact tractor. (See Entering And Exiting The Compact Tractor on Page 11)


⚠ WARNING

PINCHING HAZARD

Failure to follow instructions can cause serious injury. Keep fingers and hands out of pinch points when installing and removing implement or attachments. †


W3271

Figure 10

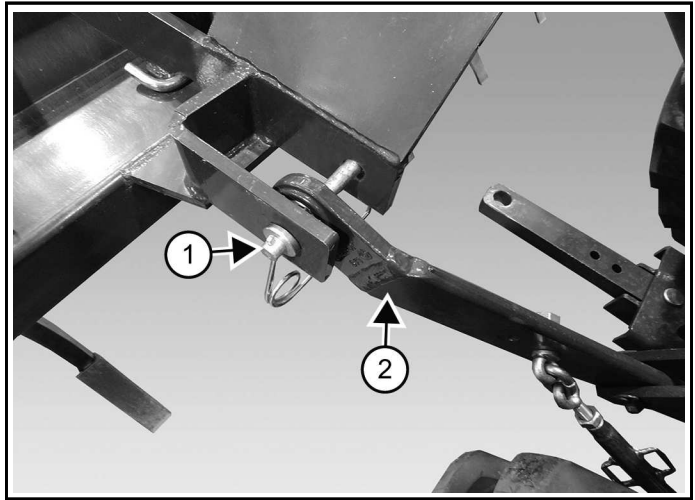


8. Install the lower implement pin (Item 1) through the lower mounts and lower link (Item 2) [Figure 10] (both sides) and secure with retaining clip.

Figure 11

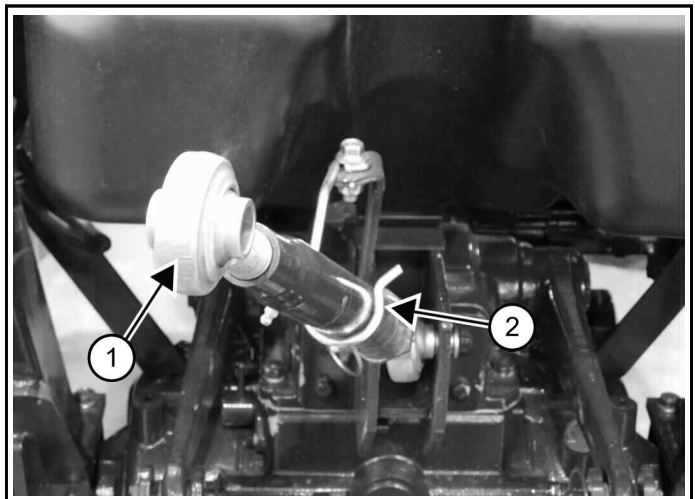

9. Remove the top link (Item 1) from the storage position bracket (Item 2) [Figure 11].

Figure 12

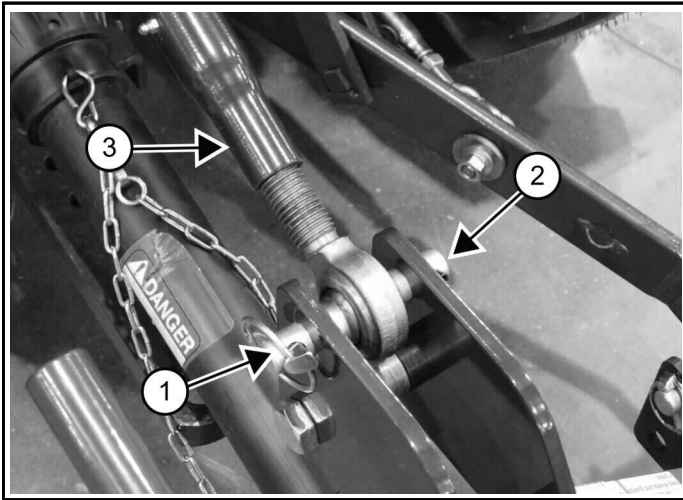


10. Lower the top link (Item 3) [Figure 12] until it aligns with the implement upper mounting hole.
 11. Install the pin (Item 2) and retainer pin (Item 1) [Figure 12].
- NOTE:** It may be necessary to lengthen or shorten the top link to align it with the implement mounting hold [Figure 12].
12. The implement can be leveled front to back by adjusting the top link.
 13. The implement side to side sway will need to be adjusted. (See Adjusting The Sway Bar on Page 14)

Raising The Storage Stand

NOTE: Your machine and attachment and / or implement models may vary, but the procedure is the same.


1. Enter the compact tractor.
(See Entering And Exiting The Compact Tractor on Page 11)
2. Start the engine and release the parking brake.
3. Always park on flat level ground. Raise the three-point implement slightly above the ground. See the tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch.
4. Stop the engine and exit the compact tractor.
(See Entering And Exiting The Compact Tractor on Page 11)

Figure 13

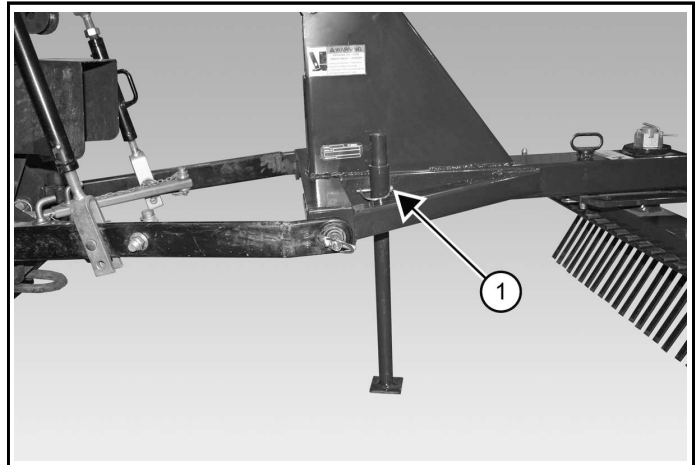

5. Remove the retaining pin (Item 1) [Figure 13]


Figure 14

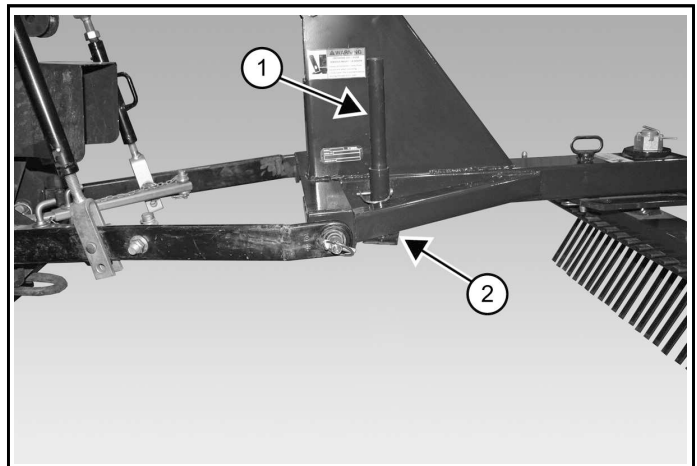

6. Raise the storage stand (Item 1) [Figure 14].
7. Align the holes and install the retaining pin (Item 2) [Figure 14].

Adjusting The Lift Link

Figure 15

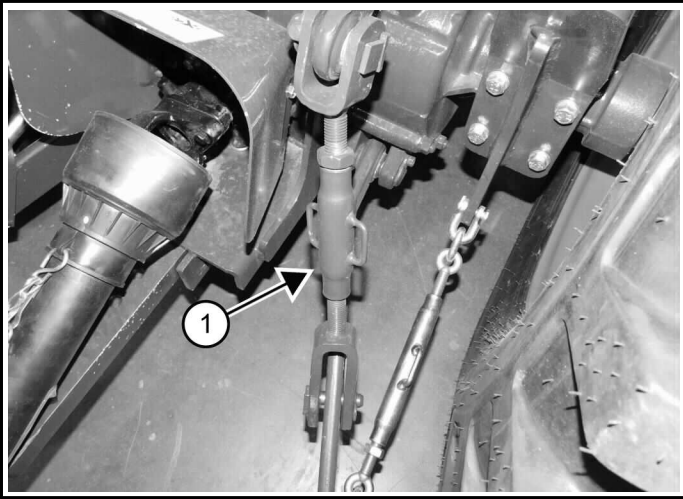


The lift link (Item 1) [Figure 15] is used to adjust the side to side level of the implement.

See the compact tractor Operation & Maintenance Manual for detailed information on adjusting the lift link.

Adjusting The Sway Bar

Figure 16

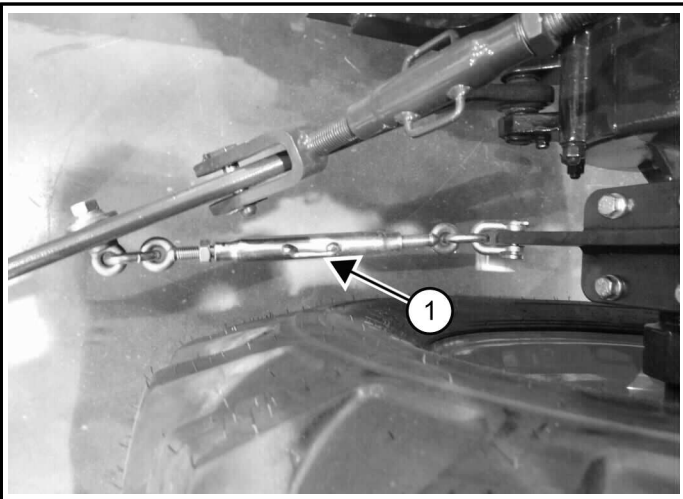

The sway bar (Item 1) [Figure 16] (both sides) are used to center the implement between the tires and limits the implements side to side movement.

Adjust the sway bars to center the implement between the tires. See the compact tractor Operation & Maintenance Manual for detailed information on adjusting sway bars.

When adjusting the sway bars with implement installed, the implement will need to be raised slightly off the ground.

Control Functions Three-Point Hitch (Implement)

The three-point hitch will be used to raise or lower the implement. (See the compact tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch).

Driving The Implement And Tractor To Worksite

The following images may not show your exact three-point implement but the procedure is the same.

⚠ WARNING

GENERAL HAZARD

Steering and braking can be affected by the loader attachment, implements, front wheel assist and the rear differential lock.

Always install the correct ballast. Do not exceed the Loader or Three-Point Hitch lift capacities.

Always carry loads low. Slow down when turning. Always lock the brake pedals together (if equipped) for road travel.

Unlock the brake pedals (if equipped) only when using brake pedals to assist in slow speed turns in work applications.

Make sure that the brakes are adjusted correctly so the compact tractor does not pull to one side when braking.*

W-2738

⚠ WARNING

INSTABILITY HAZARD

Failure to obey warnings can cause the machine to rollover.

- **Use ROPS and fasten the seat belt.**
- **Install the correct rear ballast.**
- **Do NOT exceed the Loader lift capacity.**
- **Check tire condition and proper air pressure.**
- **Use tires with the correct load rating.***

W-3043

1. Enter the compact tractor.
(See Entering And Exiting The Compact Tractor on Page 11)
2. Start the engine.

Figure 17



P142007g

3. Raise the implement to the travel position [Figure 17]. See the compact tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch.
4. Drive the compact tractor and implement to the work area.
5. When operating on public road or highway, always follow local regulations. For example; Slow Moving Vehicle (SMV) emblem or directional signals and hazard / flasher lights may be required.
6. Park on flat level ground.
7. Lower the implement slightly above the ground. (See the compact tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch.)
8. Stop the engine and exit the compact tractor. (See Entering And Exiting The Compact Tractor on Page 11)

WARNING

UNINTENDED MOVEMENT HAZARD
Failure to follow instructions can cause serious injury or death.


Before you leave the operator's seat:
Fully lower the loader arms, put the attachment flat on the ground (if equipped).
Fully lower the implement(s) to the ground (if equipped).
Lock brake pedals together (if equipped) and engage the parking brake.
Place all controls in neutral.
Stop the engine, unfasten the seat belt, and remove the key. ◀

W-3178

Angled Positioning

NOTE: Your machine and attachment and / or implement models may vary, but the procedure is the same.

Figure 18

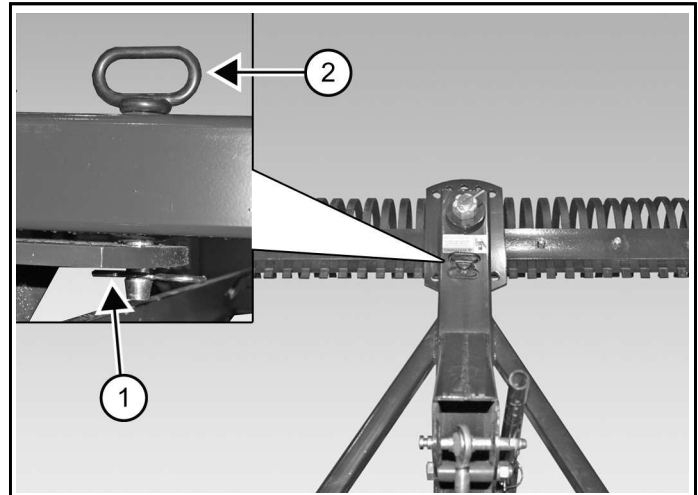

C217658a

1. Remove the lower retaining pin (Item 1) [Figure 18].
2. Remove the locking pin (Item 2) [Figure 18].

WARNING


PINCHING HAZARD

Failure to follow instructions can cause serious injury.
Keep fingers and hands out of pinch points when installing and removing implement or attachments. ◀

W-2571

3. Rotate the implement to one of the forward angled positions.

Figure 19

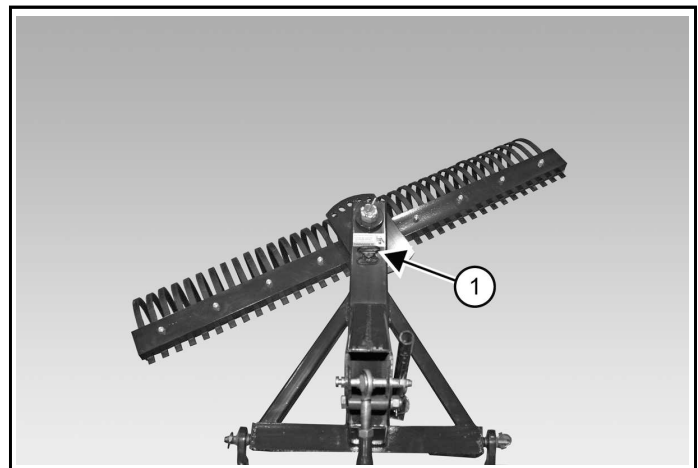


P-96315a

4. Install the locking pin (Item 1) [Figure 19] and lower retaining pin.

Backfilling Positioning

The following images may not show your exact three-point implement but the procedure is the same.

Figure 20

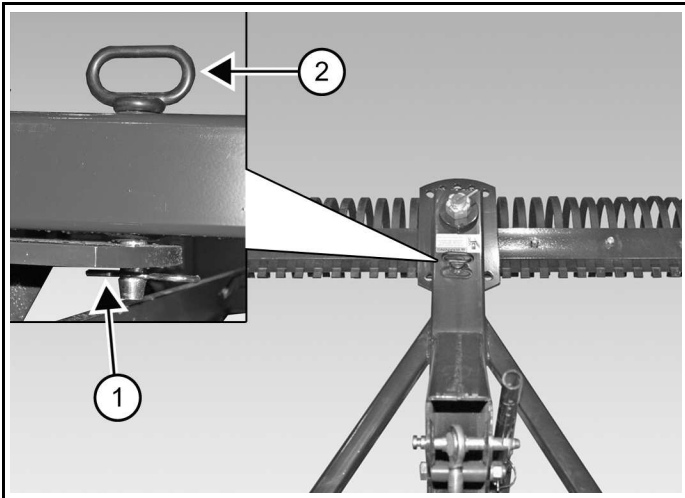

1. Remove the lower retaining pin (Item 1) [Figure 20].
2. Remove the locking pin (Item 2) [Figure 20].

⚠ WARNING

PINCHING HAZARD

Failure to follow instructions can cause serious injury.

Keep fingers and hands out of pinch points when installing and removing implement or attachments. ◀

3. Rotate the implement 180° or to a rearward angled position. Install the locking pin (Item 1) [Figure 20] and retaining.

Operating The Three-Point Implement

The three-point tine rake can be used for leveling and landscaping.

1. Park on flat level ground. Lower the three-point tine rake slightly above the ground. See the compact tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch.
2. Stop the engine and exit the compact tractor. (See Entering And Exiting The Compact Tractor on Page 11)

⚠ WARNING

UNINTENDED MOVEMENT HAZARD

Failure to follow instructions can cause serious injury or death.

Before you leave the operator's seat:

Fully lower the loader arms, put the attachment flat on the ground (if equipped).

Fully lower the implement(s) to the ground (if equipped).

Lock brake pedals together (if equipped) and engage the parking brake.

Place all controls in neutral.

Stop the engine, unfasten the seat belt, and remove the key. ◀

W-3178

3. Adjust the three-point tine rake in any single or combination of the following position:
 - a. Angled (See Angled Positioning on Page 15)
 - b. Backfilling (See Backfilling Positioning on Page 16)
4. Enter the compact tractor (See Entering And Exiting The Compact Tractor on Page 11) . Start the engine and release the parking brake.

⚠ WARNING

GENERAL HAZARD

Failure to follow instructions can cause serious injury or death.

- Fasten seat belt, start, and operate only from the operator's seat.
- Never wear loose clothing when working near machine. ◀

W-2135

5. Slowly drive the tractor with the three-point tine rake on the ground. Adjust the three-point hitch for desired position. See the compact tractor Operation & Maintenance Manual for detailed information operating the three-point hitch.
6. The top link may need to be adjusted to set the rake times to the correct positions.

Watch for and avoid obstructions and obstacles that could cause damage to the three-point tine rake and compact tractor.

Damage to the three-point tine rake and compact tractor may occur by hitting hidden objects.

Removing The Three-Point Implement

Lowering The Storage Stand

NOTE: Your machine and attachment and / or implement models may vary, but the procedure is the same.

In muddy conditions or to prevent the implement from freezing to the ground, put the implement on planks or blocks before removing the implement from the machine.

⚠ WARNING

UNINTENDED MOVEMENT HAZARD

Failure to follow instructions can cause serious injury or death.

Before you leave the operator's seat:

Fully lower the loader arms, put the attachment flat on the ground (if equipped).

Fully lower the implement(s) to the ground (if equipped).

Lock brake pedals together (if equipped) and engage the parking brake.

Place all controls in neutral.

Stop the engine, unfasten the seat belt, and remove the key. ◀

W-3178

1. Always park on flat, level ground. Fully lower the loader arms and put the attachment flat on the ground (if equipped).
2. Lower the three-point implement slightly above the ground. See the compact tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch.
3. Stop the engine and exit the compact tractor. (See Entering And Exiting The Compact Tractor on Page 11)

⚠ WARNING

CRUSHING HAZARD

Failure to follow instructions can cause serious injury or death.


Do not stand between the machine and attachment / implement.

Keep bystanders away.

Install support stands before disconnecting attachment / implement from the machine. ◀

W-2724


Figure 21

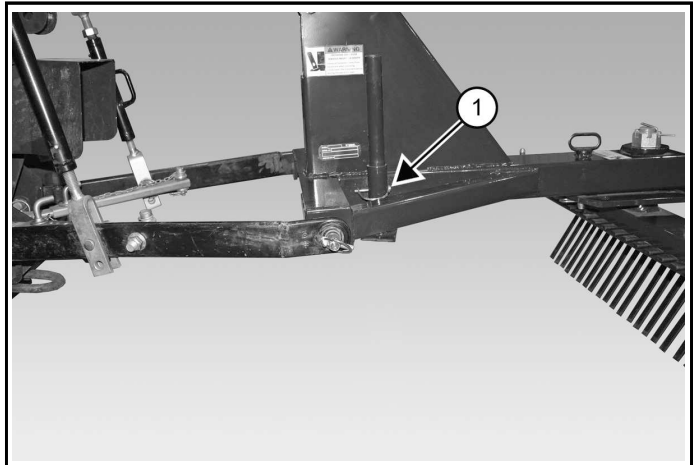

P-98331b

4. Remove the retaining pin (Item 1) [Figure 21].

Figure 22

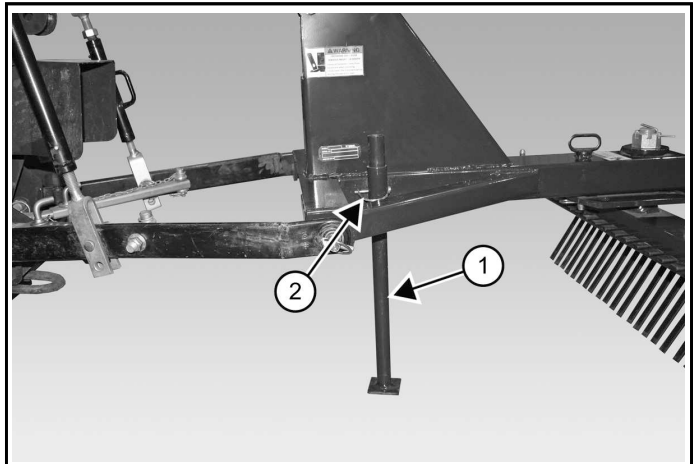


P-98309b

5. Lower the storage stand (Item 1) [Figure 22]. Align the holes and install the retaining pin (Item 2) [Figure 22].
6. Enter the compact tractor. (See Entering And Exiting The Compact Tractor on Page 11)
7. Start the engine and release the parking brake.
8. Lower the three-point setting the implement on the ground. See the compact tractor Operation & Maintenance Manual for detailed information on operating the three-point hitch.
9. Stop the engine and exit the compact tractor. (See Entering And Exiting The Compact Tractor on Page 11)

Removing The Three-Point Implement

Figure 23

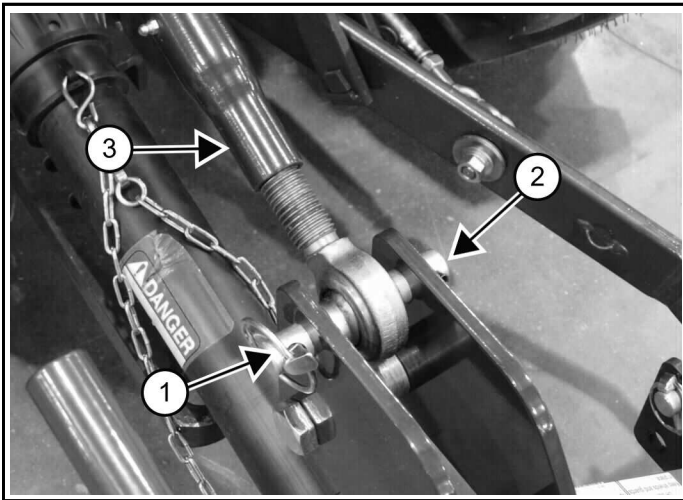


C138245a

1. Remove the retainer pin (Item 1) and pin (Item 2) [Figure 23].

It may be necessary to lengthen or shorten the top link when remove the implement from the compact tractor.

2. Remove the top link (Item 3) [Figure 23] from the implement.


Figure 24

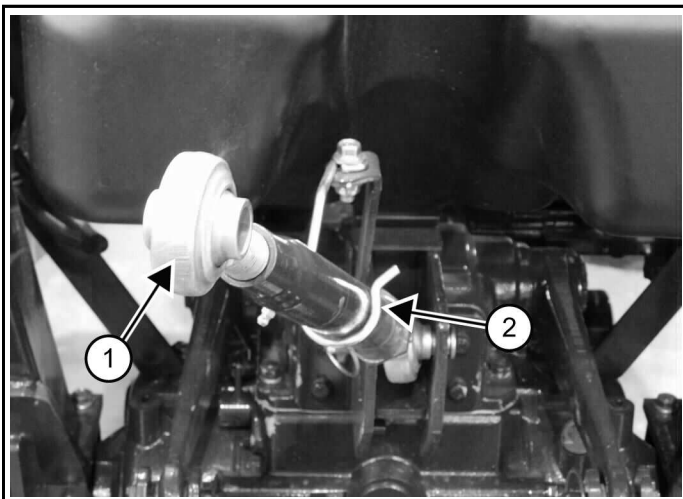

138244a

3. Place the top link (Item 1) into the storage position bracket (Item 2) [Figure 24].


Figure 25

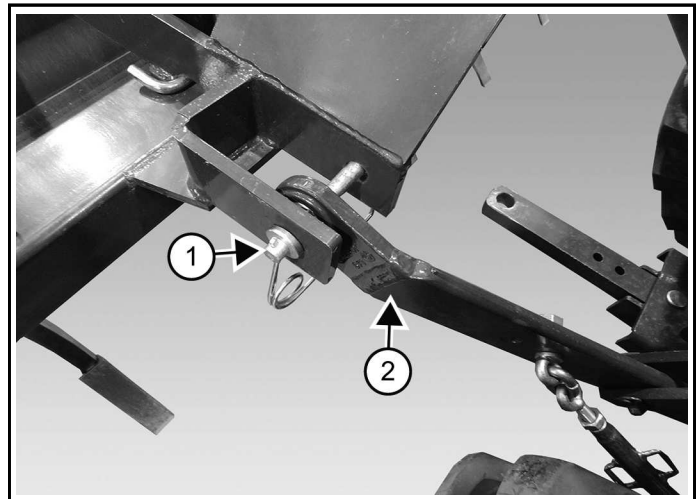

P142005a

4. Remove the lower implement pin (Item 1) from the lower mounts and lower link (Item 2) [Figure 25].
5. Enter the compact tractor.
(See Entering And Exiting The Compact Tractor on Page 11)
6. Start the engine and release the parking brake.

Figure 26

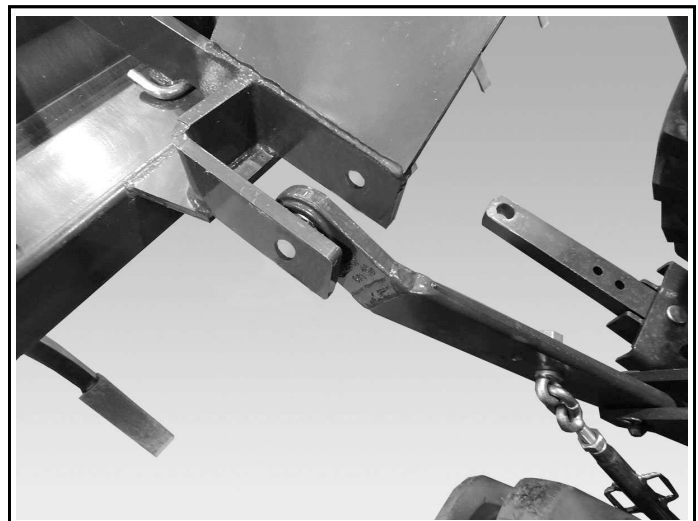


P142006c

7. Slowly drive the compact tractor away from the implement [Figure 26].
8. Remove the front ballast from the compact tractor (if equipped).

LIFTING THE IMPLEMENT

Use chains that are in good condition and of adequate size to lift the implement.

Figure 27

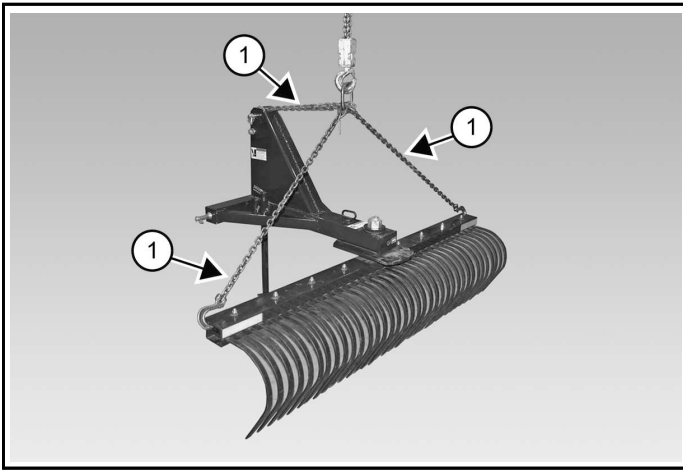

P-96327a


1. Fasten the chains (Item 1) [Figure 27] to the three-point tine rake.

TRANSPORTING THE IMPLEMENT ON A TRAILER

Fastening The Implement To A Trailer


1. Place the storage stand in raised position.
(See Raising The Storage Stand on Page 13)

Figure 28

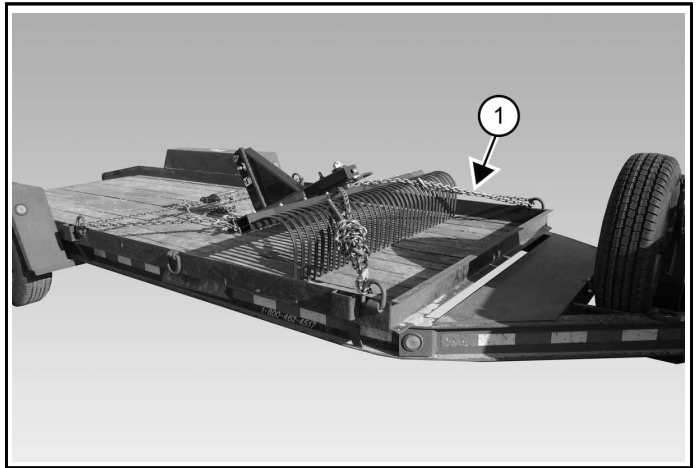

P-96330a

Figure 29

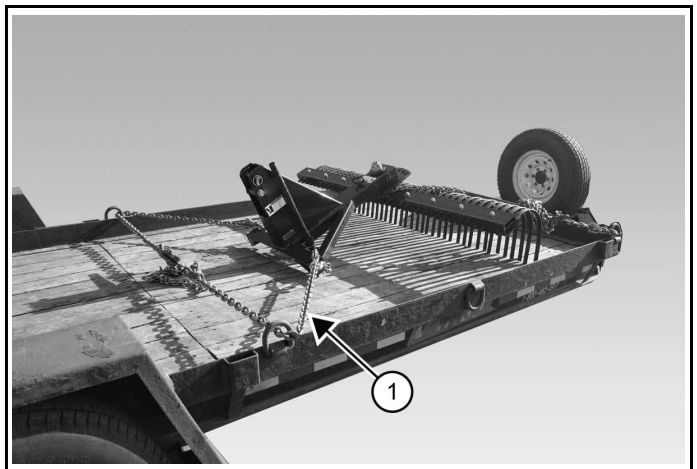

P-96329a

2. Fasten the chains to the implement (Item 1) [Figure 28] and [Figure 29] and fasten each end of the chain to the transport vehicle.
3. Use chain binders to prevent the implement from moving during transport.

TRANSPORTING THE IMPLEMENT AND MACHINE ON A TRAILER

WARNING

INSTABILITY HAZARD

Wood ramps can break and cause personal injury. Use adequately designed ramps of sufficient strength to support the weight of the machine loading onto a transport vehicle. ◀

W-2058

Be sure the transport and towing vehicles are of adequate size and capacity for weight of machine and attachment / implement combination. (See machine and attachment Operation & Maintenance Manuals for specifications)

Loading

- The rear of the trailer must be blocked or supported when loading and unloading to prevent the front of the trailer from raising.
 - Load the heaviest end of the machine and attachment / implement combination first.
 - Lower the attachment / implement to the floor.
 - Turn the machine off.
 - Engage the parking brake (if equipped).
 - Exit the machine. (See the machine's Operation & Maintenance Manual for the correct procedure.)

Fastening

- Install the chains at the front and rear tie-down positions on the machine. (See the machine's Operation & Maintenance Manual to properly chain the machine to the transport vehicle.)
 - Install chains on the attachment / implement (if required).
 - Fasten each end of the chain to the transport vehicle.

NOTE: Use chain binders to prevent the attachment / implement and machine from moving during transport.




MAINTENANCE SAFETY WARNINGS



- Never service the Ignite Attachments attachment / implement without instructions. Read and understand the Operation & Maintenance Manual and safety signs (decals) on machine.
- Follow warnings and instructions in manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.



This Safety Alert Symbol means: “Attention! Be Alert! Your Safety is Involved!” Carefully read the message that follows.

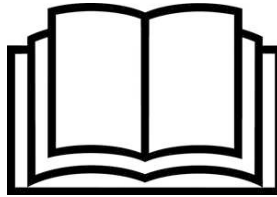

- Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
- Cleaning and maintenance are required daily.
- Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
- Always lower the attachment / implement to the ground before lubricating or servicing.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
- Stop, cool, and clean engine of flammable materials before checking fluids.
- Keep body, loose objects, and clothing away from moving parts, electrical contacts, hot parts, and exhaust.
- Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure, and flying debris or when tools are used. Use eye protection approved for type of welding.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED SERVICE PERSONNEL**. Always use genuine Ignite Attachments replacement parts.

TROUBLESHOOTING CHART

WARNING

INSUFFICIENT INSTRUCTIONS HAZARD

Untrained operators or failure to follow instructions can cause serious injury or death.

- Read and understand the Operation & Maintenance Manual and decals on machine.
- Follow warnings and instructions in the manuals when making repairs, adjustments or servicing.
- Check for correct function after adjustments, repairs or service. ◀

W-2408

Use the following troubleshooting chart to locate and correct problems which most often occur with the implement.

PROBLEM	CAUSE	CORRECTION
A-Frame bent	Impacting objects while backfilling.	Slow speed down if soil conditions are unknown.
Unable to level ground adequately.	Tractor lift link set incorrectly.	Refer to machine's Operation & Maintenance Manual for the correct procedure.
Shearing locking pin.	Impacting hidden objects.	Slow speed down if soil conditions are unknown.
	Locking pin worn / faulty.	Replace locking pin.

MAINTENANCE INTERVALS

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures.

Explanation of the service intervals:

- **10:** Every 10 hours or daily (before starting the machine).

Service Schedule			
O	Check condition / proper operation. Adjust or replace as needed.	G	Grease.
Item	Service Required	Service Interval (hours)	
		10	
Mainframe	Check frame and welds.	O	
Hardware	Check all bolts and nuts are tight.	O	
Lubrication	Lubricate grease fitting. (See Lubrication Locations on Page 24)	G	

LUBRICATION LOCATIONS

Always use a good quality lithium based multi-purpose grease when lubricating the implement. Apply lubricant until extra grease shows.

⚠ IMPORTANT

ENVIRONMENTAL HAZARD

Fluids such as engine oil, hydraulic fluid, coolants, grease, etc. must be disposed of in an environmentally safe manner. Some regulations require that certain spills and leaks on the ground must be cleaned in a specific manner. See local regulations for correct disposal methods. ◀

1-2067

⚠ WARNING

IMPACT AND INJECTION HAZARDS


Flying debris or pressurized fluids can cause serious injury or death.

Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material.
- Engine is running.
- Tools are being used. ◀

W-2019

Figure 30

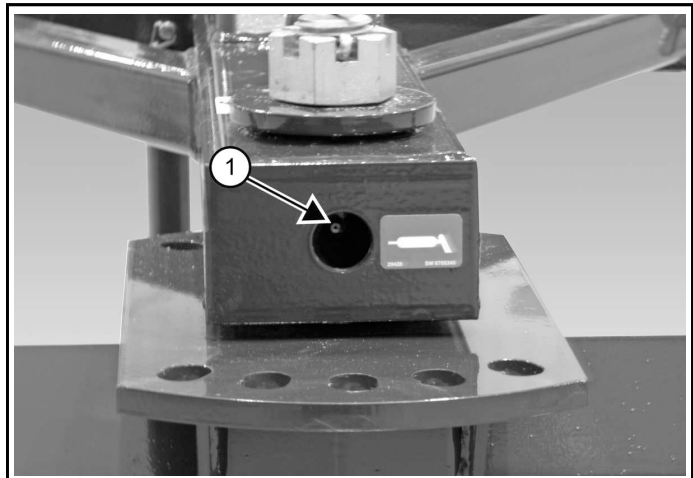

p-96210a

REF.	LOCATION	NO. OF FITTINGS
1	Pivot assembly	1

REMOVING AND INSTALLING PIVOT MOUNT

WARNING

CRUSHING HAZARD

Falling implement can cause serious injury or death. Securely block up the implement before working underneath. ◀

W-2505

WARNING

IMPACT AND INJECTION HAZARDS

Flying debris or pressurized fluids can cause serious injury or death.


Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material.
- Engine is running.
- Tools are being used. ◀

W-2019

1. Park the machine on a flat level surface. Lower the three-point tine rake setting on the ground. See the machine Operation & Maintenance Manual for detailed information on operating the three-point hitch.
2. Stop the engine and exit the machine.
(See Entering And Exiting The Compact Tractor on Page 11)


Figure 31

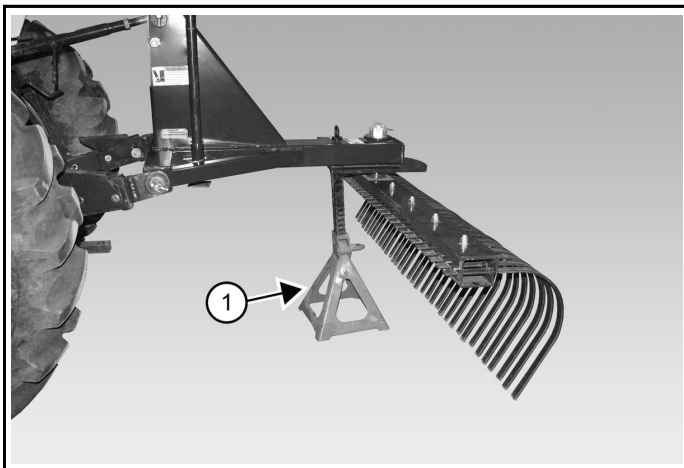

P-98317a

3. Place jackstand (Item 1) [Figure 31] under the pivot plate.


Figure 32

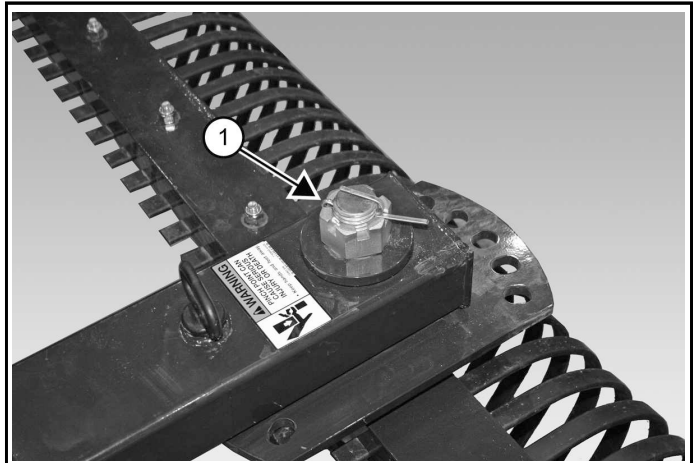

P-98325a

4. Remove the cotter pin (Item 1) [Figure 32].

Figure 33

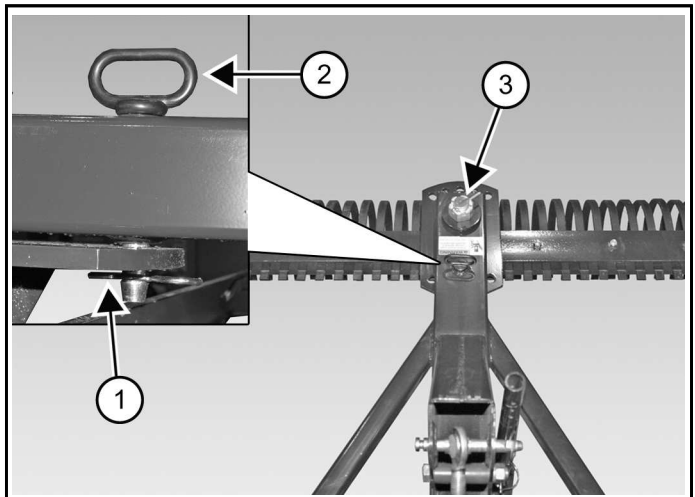


C217656b

5. Remove the retaining pin (Item 1) and locking pin (Item 2) [Figure 33].
6. Remove the castle nut (Item 1) [Figure 33].

When installing, tighten the castle nut by hand until snug against the washer. Align nearest groove in castle nut with through hole in spindle.


NOTE: Do not overtighten the castle nut. Pivot assembly should turn easily and smooth by hand.

Figure 34

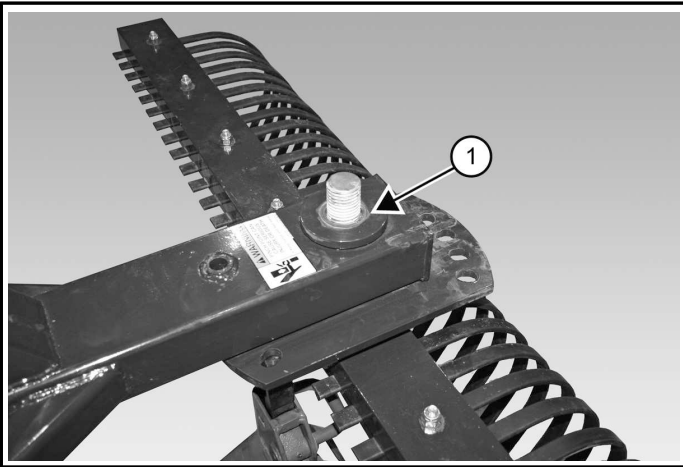

7. Remove the washer (Item 1) [Figure 34]

Figure 35

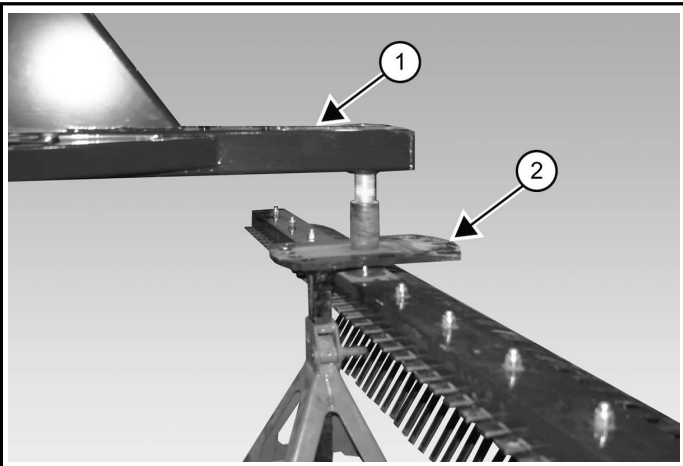

8. Raise the machine's three point separating the mainframe (Item 1) from the pivot assembly (Item 2) [Figure 35].

WARNING

CRUSHING AND ENTANGLEMENT HAZARD
Failure to follow instructions can cause serious injury or death.

- Keep arms and feet away from implement while raising and lowering.
- Do not stand between the compact tractor and implement.
- Move the three-point hitch position lever slowly.
- Turn Auto / Manual power take-off (PTO) switch to the off position before installation or removal of the implement.

W-3061

9. Move the pivot assembly from under the mainframe.
10. Lower the machine's three-point until the mainframe is setting on the ground.
11. Inspect all parts for wear or damage. Replace any worn or damaged parts. Contact Ignite Attachments for replacement parts.

When installing raise the machine's three-point until the mainframe is about 406 – 457 mm (16–18 in) above the ground.

12. Place the pivot assembly under the mainframe, aligning the pivot spindle with the mounting hole in the mainframe.
13. Slowly lower the machine's three-point until the mainframe is sitting on the pivot assembly.

REMOVING AND INSTALLING RAKE TINES

WARNING

CRUSHING HAZARD

Falling implement can cause serious injury or death. Securely block up the implement before working underneath.*

WI-2565

WARNING

IMPACT AND INJECTION HAZARDS

Flying debris or pressurized fluids can cause serious injury or death.


Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material.
- Engine is running.
- Tools are being used.*

WI-2019

1. Park the machine on a flat level surface. Lower the three-point tine rake setting on the ground. See the machine Operation & Maintenance Manual for detailed information on operating the three-point hitch.
2. Stop the engine and exit the machine. (See Entering And Exiting The Compact Tractor on Page 11)
3. Remove the pivot mount assembly. (See Removing And Installing Pivot Mount on Page 25)

Figure 36

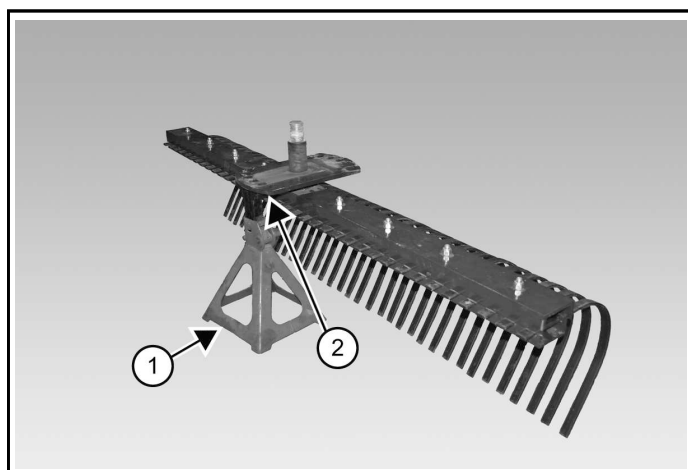


P-96322a

4. Remove the jackstand (Item 1) and place the pivot assembly (Item 2) [Figure 36] on the ground.

When installing, place a jackstand under the pivot assembly.

Figure 37

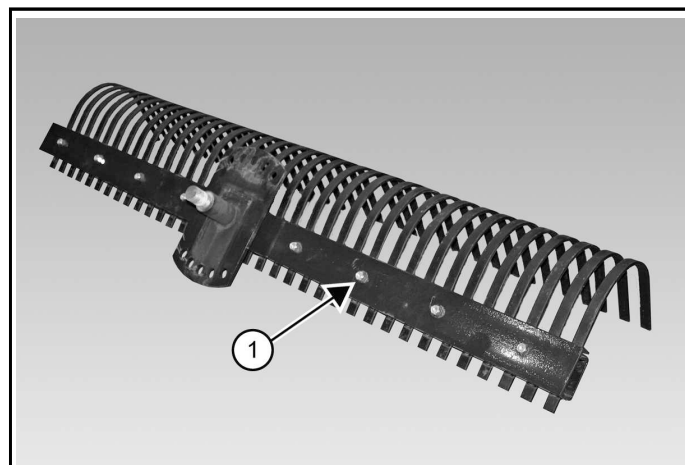


P-96321a

5. Remove the bolts and nuts (Item 1) [Figure 37].

When installing, install and tighten the bolts and nuts to 47 N·m (35 ft-lb) torque.

Figure 38

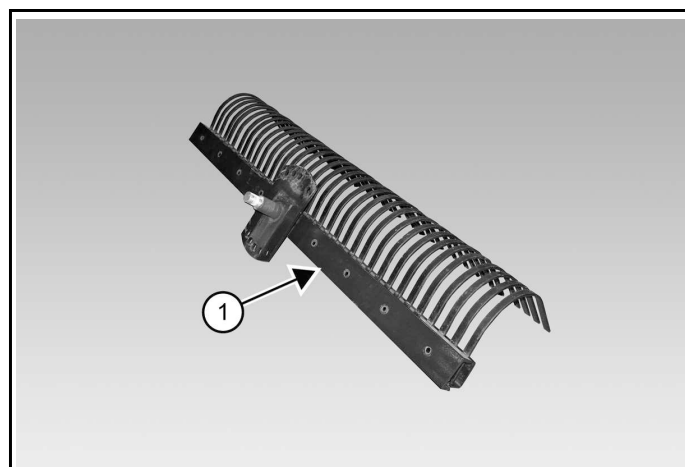


P-96320a

6. Remove upper retaining channel / pivot mount (Item 1) [Figure 38].

When installing, place the upper retaining channel / pivot mount in position, aligning the mounting holes.

Figure 39

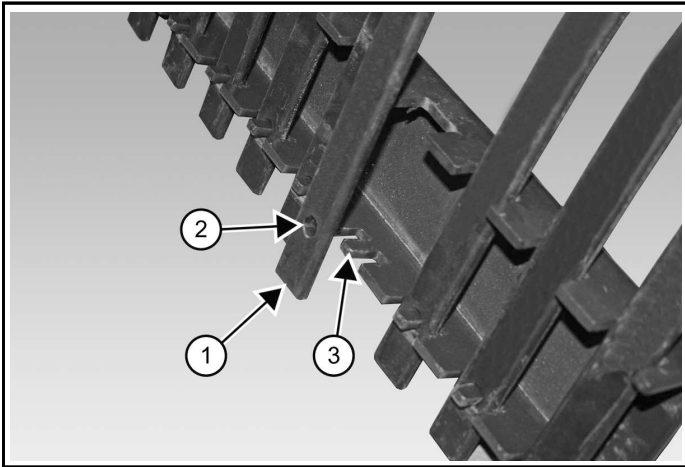

7. Remove damaged or worn rake tine (Item 1) [Figure 39].
8. Inspect all parts for wear or damage. Replace any worn or damaged parts. See your Ignite Attachments representative for replacement parts.

When installing install new rake tines. Make sure you place the hole (Item 2) in the rake tine onto mounting tab (Item 3) [Figure 39].

STORAGE AND RETURN TO SERVICE

Implement Storage

Sometimes it may be necessary to store your Ignite Attachments implement for an extended period of time. Below is a list of items to perform before storage.

- Thoroughly clean and wash the implement.
- Lubricate the implement (if applicable).
- Inspect the three-point mounts, mounting pins and all welds on the implement for wear and damage.
- Check for loose hardware, missing guards, or damaged parts.
- Check for damaged or missing decals. Replace if necessary.
- Replace worn or damaged parts.
- Place the implement in a dry protected shelter.
- Place the implement flat on the ground.
- In muddy conditions or to prevent the implement from freezing to the ground, put the implement on planks or blocks before removing the implement from the machine.

Return To Service

After the Ignite Attachments implement has been in storage, it is necessary to follow a list of items to return the implement to service.


- Be sure all shields and guards are in place.
- Lubricate the implement (if applicable).
- Install and operate implement, check for correct function.

TINE RAKE DIMENSIONS

All dimensions are show in millimeters. Respective standard dimensions are given in inches enclosed by parentheses.

Where applicable, specifications conform to SAE and ISO standards and are subject to change without notice.

Figure 40

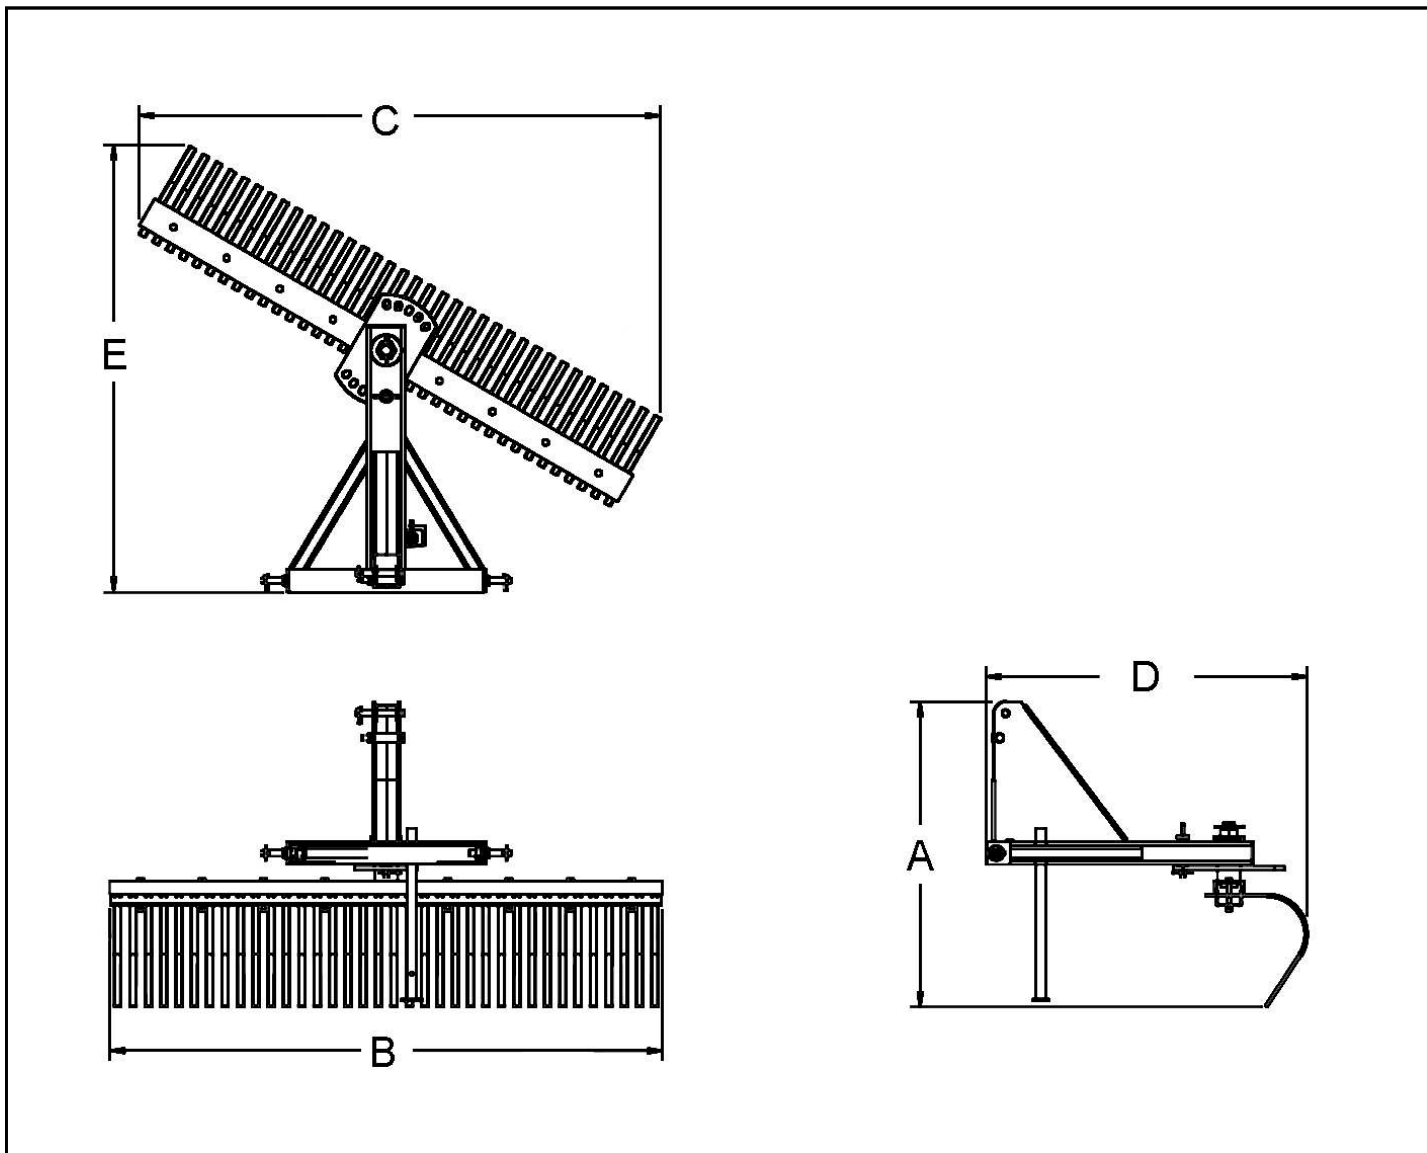

p-96308a

DESCRIPTION	RAKE 60	RAKE 72	RAKE 84
Height (A)	1011 mm (39.8 in)	1011 mm (39.8 in)	1011 mm (39.8 in)
Width (Rake Straight) (B)	1524 mm (60 in)	1829 mm (72 in)	2134 mm (84 in)

DESCRIPTION	RAKE 60	RAKE 72	RAKE 84
Width (Rake Fully Angled (C))	1467 mm (57.77 in)	1735 mm (68.3 in)	2002 mm (78.83 in)
Length (D)	1063 mm (41.85 in)	1063 mm (41.85 in)	1063 mm (41.85 in)
Length (Rake Fully Angled (E))	1395 mm (54.94 in)	1470 mm (57.89 in)	1541 mm (60.68 in)

PERFORMANCE SPECIFICATIONS

DESCRIPTION	RAKE 60	RAKE 72	RAKE 84
Operating Weight (Approx.)	112 kg (248 lb)	123 kg (272 lb)	130 kg (287 lb)
Three-Point Hitch Category	Category I	Category I	Category I
Rake Positions (Forward / Rear)	5 / 5	5 / 5	5 / 5
Rake Degrees (Forward / Rear)	15° Left or Right	15° Left or Right	15° Left or Right
Tine Thickness	8 mm (0.31 in)	8 mm (0.31 in)	8 mm (0.31 in)
Jackstand	Yes	Yes	Yes

TORQUE SPECIFICATION FOR BOLTS

Torque For General SAE Bolts

The following torque values are for use in general applications and where torque values are not otherwise specified. They apply to all steel screw threaded fasteners having the same strength levels and coated with zinc phosphate and oil or zinc dichromate.

THREAD SIZE	CAP SCREW BOLT AND NUT SAE GRADE 5	CAP SCREW BOLT AND NUT SAE GRADE 8	SOCKET HEAD CAP SCREW OR 12-POINT HEAD CAP SCREW
0.250	9 – 10 N•m (80 – 90 in-lb)	13 – 14 N•m (110 – 120 in-lb)	15 – 16 N•m (130 – 145 in-lb)
0.3125	21 – 23 N•m (180 – 200 in-lb)	24 – 27 N•m (215 – 240 in-lb)	31 – 34 N•m (270 – 300 in-lb)
0.375	34 – 38 N•m (25 – 28 ft-lb)	48 – 54 N•m (35 – 40 ft-lb)	61 – 68 N•m (45 – 50 ft-lb)
0.4375	54 – 61 N•m (40 – 45 ft-lb)	82 – 88 N•m (60 – 65 ft-lb)	95 – 102 N•m (70 – 75 ft-lb)
0.500	88 – 95 N•m (65 – 70 ft-lb)	125 – 135 N•m (90 – 100 ft-lb)	150 – 160 N•m (110 – 120 ft-lb)
0.5625	125 – 135 N•m (90 – 100 ft-lb)	170 – 190 N•m (125 – 140 ft-lb)	205 – 225 N•m (150 – 165 ft-lb)
0.625	170 – 190 N•m (125 – 140 ft-lb)	240 – 260 N•m (175 – 190 ft-lb)	285 – 310 N•m (210 – 230 ft-lb)
0.750	300 – 330 N•m (220 – 245 ft-lb)	410 – 450 N•m (300 – 330 ft-lb)	490 – 540 N•m (360 – 400 ft-lb)
0.875	450 – 490 N•m (330 – 360 ft-lb)	645 – 710 N•m (475 – 525 ft-lb)	815 – 880 N•m (600 – 650 ft-lb)
1.000	645 – 710 N•m (475 – 525 ft-lb)	985 – 1085 N•m (725 – 800 ft-lb)	1220 – 1360 N•m (900 – 1000 ft-lb)
1.125	880 – 975 N•m (650 – 720 ft-lb)	1425 – 1600 N•m (1050 – 1175 ft-lb)	1770 – 1970 N•m (1300 – 1450 ft-lb)
1.250	1220 – 1360 N•m (900 – 1000 ft-lb)	2000 – 2200 N•m (1475 – 1625 ft-lb)	2510 – 2720 N•m (1850 – 2000 ft-lb)
1.375	1630 – 1830 N•m (1200 – 1350 ft-lb)	2720 – 2980 N•m (2000 – 2200 ft-lb)	3330 – 3660 N•m (2450 – 2700 ft-lb)
1.500	2040 – 2240 N•m (1500 – 1650 ft-lb)	3520 – 3870 N•m (2600 – 2850 ft-lb)	4270 – 4680 N•m (3150 – 3450 ft-lb)
1.625	2720 – 2980 N•m (2000 – 2200 ft-lb)	4680 – 5150 N•m (3450 – 3800 ft-lb)	5630 – 6240 N•m (4150 – 4600 ft-lb)
1.750	3390 – 3730 N•m (2500 – 2750 ft-lb)	5830 – 6500 N•m (4300 – 4900 ft-lb)	6920 – 7730 N•m (5100 – 5700 ft-lb)

THREAD SIZE	CAP SCREW BOLT AND NUT SAE GRADE 5	CAP SCREW BOLT AND NUT SAE GRADE 8	SOCKET HEAD CAP SCREW OR 12-POINT HEAD CAP SCREW
1.875	4270 – 4750 N•m (3150 – 3500 ft-lb)	7450 – 8300 N•m (5500 – 6100 ft-lb)	8800 – 9800 N•m (6500 – 7200 ft-lb)
2.000	5150 – 5700 N•m (3800 – 4200 ft-lb)	8800 – 9800 N•m (6500 – 7200 ft-lb)	10600 – 11700 N•m (7800 – 8600 ft-lb)

NOTE: Use the torque value for the part having the lesser grade when a fastener and nut are used together but have a different grade.

Torque For General Metric Bolts

Torque values shown in table below apply to combinations of a fastener and nut having the same property class, and both being coated with zinc phosphate and oil or zinc dichromate.

Use the torque value for the part having the lesser property class when a fastener and nut are used together but have a different property class.

THREAD NOM. DIA.	PROPERTY CLASS		
	8.8	10.9	12.9
M4	2,5 – 3,5 N•m (2.0 – 2.5 ft-lb)	3,8 – 4,2 N•m (2.8 – 3.1 ft-lb)	4,7 – 5,3 N•m (3.5 – 3.9 ft-lb)
M5	5,5 – 6,5 N•m (4.0 – 5.0 ft-lb)	7,6 – 8,4 N•m (5.6 – 6.2 ft-lb)	8,5 – 9,5 N•m (6.2 – 7.0 ft-lb)
M6	9,5 – 10,5 N•m (7.0 – 7.5 ft-lb)	12,3 – 13,7 N•m (9.1 – 10.1 ft-lb)	14,2 – 15,8 N•m (10.4 – 11.6 ft-lb)
M7	15 – 17 N•m (11.0 – 12.5 ft-lb)	20 – 22 N•m (14.7 – 16.2 ft-lb)	23,7 – 26,3 N•m (17.5 – 19.5 ft-lb)
M8	24 – 26 N•m (18 – 19 ft-lb)	29,4 – 32,6 N•m (21.7 – 24.0 ft-lb)	35 – 39 N•m (25.5 – 28.5 ft-lb)
M10	43 – 47 N•m (32 – 35 ft-lb)	57 – 63 N•m (42.0 – 46.5 ft-lb)	71 – 79 N•m (52.5 – 58.5 ft-lb)
M12	75 – 85 N•m (55 – 60 ft-lb)	105 – 115 N•m (78 – 85 ft-lb)	123 – 137 N•m (91 – 110 ft-lb)
M14	125 – 140 N•m (90 – 100 ft-lb)	160 – 180 N•m (118 – 133 ft-lb)	190 – 210 N•m (140 – 155 ft-lb)
M16	190 – 210 N•m (140 – 155 ft-lb)	255 – 285 N•m (188 – 210 ft-lb)	300 – 330 N•m (225 – 245 ft-lb)
M18	260 – 290 N•m (190 – 215 ft-lb)	345 – 385 N•m (255 – 285 ft-lb)	420 – 460 N•m (310 – 340 ft-lb)
M20	370 – 410 N•m (275 – 300 ft-lb)	490 – 550 N•m (360 – 405 ft-lb)	590 – 650 N•m (440 – 490 ft-lb)
M22	500 – 550 N•m (370 – 400 ft-lb)	660 – 740 N•m (490 – 545 ft-lb)	800 – 880 N•m (590 – 650 ft-lb)
M24	640 – 700 N•m (470 – 520 ft-lb)	850 – 950 N•m (625 – 700 ft-lb)	1000 – 1120 N•m (730 – 830 ft-lb)

THREAD NOM. DIA.	PROPERTY CLASS		
	8.8	10.9	12.9
M27	930 – 1030 N•m (680 – 760 ft-lb)	1230 – 1370 N•m (900 – 1000 ft-lb)	1470 – 1630 N•m (1100 – 1200 ft-lb)
M30	1260 – 1400 N•m (930 – 1030 ft-lb)	1700 – 1900 N•m (1250 – 1400 ft-lb)	2000 – 2200 N•m (1500 – 1600 ft-lb)
M33	1720 – 1900 N•m (1270 – 1400 ft-lb)	2300 – 2500 N•m (1700 – 1850 ft-lb)	2700 – 3100 N•m (2000 – 2300 ft-lb)
M36	2200 – 2450 N•m (1620 – 1800 ft-lb)	2900 – 3200 N•m (2200 – 2400 ft-lb)	3500 – 3900 N•m (2600 – 2900 ft-lb)

IMPLEMENT WARRANTY

A statement explaining the terms and conditions of the warranty coverage that applies to your implement is available by visiting Igniteattachments.com.

A

angled positioning 15

B

backfilling 16

ballast
 setting up 11

C

call before you dig 5

compact tractor
 approved models 11

D

daily inspection
 implement mounting frame 10

 three-point hitch 10

driving 14

E

entering and exiting
 compact tractor 11

F

fastening implement
 to trailer 19

fire prevention
 electrical 6

 fire extinguishers 7

 fueling 7

 hydraulic system 6

flammable fluids 6

G

grinding safety 7

I

implement identification 3

implement storage 28

L

lift link
 adjusting 14

lifting 19

lubrication locations 24

M

maintenance intervals 24

maintenance safety 6

O

operating the three-point implement 16

P

pivot mount
 removing and installing 25

publications and training resources 8

R

rake tines
 removing and installing 27

return to service 28

S

safety rules 5

serial number
 location 3

service schedule 24

silica dust exposure
 avoiding 6

spark arrester exhaust system safety 7

specifications
 dimensions 29

 performance 31

 torque for general metric bolts 33

 torque for general sae bolts 32

standard items 4

starting safety 7

storage stand
 lowering 16

T

three point implement
 removing 18

three-point implement
 installing 11

 operation 16

transporting the implement and machine on a trailer 20

troubleshooting 23

W

warranty
 implement 35

welding safety 7



Reference Information

Product Serial Number:

Engine Serial Number:

Dealer Information:



WARNING Cancer and Reproductive Harm. This product can expose you to chemicals including lead and lead compounds, mineral oils, and phthalates which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.